

TABLE OF CONTENTS

1.	INTRODUCTION	1
1.1.	Scope of supply.....	1
1.2.	Maintenance philosophy	2
1.3.	Documentation overview	2
1.4.	Customer support.....	2
1.4.1.	Contact address	2
1.4.2.	Warranty	2
1.5.	Required qualifications of personnel	2
1.6.	Safety warnings.....	3
1.7.	Symbols	3
1.8.	Package identification.....	4
1.9.	Notations and definitions	5
2.	MAIN DATA	6
2.1.	General data	6
2.2.	Engine performance data	7
2.2.1.	Gear output as a function of ambient temperature.....	7
2.2.2.	Exhaust temperature as a function of ambient temperature.....	7
2.3.	Utilities.....	8
2.3.1.	Gas fuel specifications	8
2.3.2.	Liquid fuel specifications.....	9
2.3.3.	Auxiliary and emergency electrical power consumption.....	10
3.	TECHNICAL DESCRIPTION	11
3.1.	Gas turbine components.....	11
3.2.	OP16-3A Package.....	12
3.3.	Enclosure & skid.....	13
3.3.1.	Enclosure	13
3.3.2.	Skid	13
3.3.3.	Optional: Weather cover	13
3.4.	Short engine (PID H18650-500).....	14
3.4.1.	Engine	14
3.4.2.	Gearbox and coupling.....	15
3.5.	Oil system (PID H18265-500).....	16
3.6.	Hydraulic start system (PID H18266-500)	18
3.7.	Unit ventilation and engine air (PID 18561-500)	19

3.7.1.	Unit ventilation	19
3.7.1.1.	Ventilation inlet engine room	19
3.7.1.2.	Ventilation outlet engine room	20
3.7.1.3.	Control room ventilation.....	20
3.7.2.	Optional: Air recirculation / weather hood heating / anti-icing.....	21
3.7.3.	Engine air.....	21
3.7.3.1.	Engine air intake	21
3.7.3.2.	Engine exhaust.....	21
3.8.	Fuel system	22
3.8.1.	Gas fuel system (PID H18267-500).....	22
3.8.2.	Liquid fuel system (PID H18589-500).....	24
3.9.	Water wash system (PID H18584-500).....	25
3.10.	Control system	26
3.11.	Local control panel description.....	27
3.12.	Gas detection (PID H18597-500)	28
3.13.	Fire fighting system (PID H18597-500).....	29
3.13.1.	Fire detection	29
3.13.2.	Fire extinguishing.	31
3.14.	Vibration monitoring system.(PID 18560-500).....	32
3.15.	Dedicated Engine Control Unit (DECU).....	33
3.16.	Generator protection system	34

4. PROCESS DESCRIPTION35

4.1.	PID's	35
4.2.	Implementation	36
4.3.	Functional description.....	37
4.3.1.	Safety PLC description	37
4.3.1.1.	Objective:.....	37
4.3.1.2.	Principle	37
4.3.1.3.	Functions.....	37
4.3.2.	Package PLC and HMI control description	43
4.3.2.1.	Objective:.....	43
4.3.2.2.	Principle:.....	43
4.3.2.3.	Functions.....	43
4.3.2.4.	Sequence description	44
4.3.3.	Turbine control description.....	45
4.3.3.1.	Objective:.....	45
4.3.3.2.	Principle	45
4.3.3.3.	Functions:.....	45
4.3.4.	Generator protection, control description	47
4.3.4.1.	Objective.....	47
4.3.4.2.	Principle	47

4.3.4.3.	Functions.....	47
4.3.5.	Fire fighting control description	49
4.3.5.1.	Objective.....	49
4.3.5.2.	Principle	49
4.3.5.3.	Functions.....	49

5. OPERATING PROCEDURES.....51

5.1.	Gas turbine start-up.....	51
5.1.1.	Operator pre-start mechanical systems checks	51
5.1.2.	Operator power-up electrical systems prestart procedure.....	53
5.1.3.	Operator controlled cranking procedure	54
5.1.4.	Operator controlled starting procedure	55
5.2.	Liquid fuel draining procedure	56
5.3.	Generator start-up	57
5.3.1.	Generator going online procedure	57
5.3.2.	Generator taking load procedure.....	57
5.3.3.	Generator reducing load procedure.....	58
5.3.4.	Generator going offline procedure.....	58
5.4.	Post running	58
5.5.	During normal operation.....	59
5.6.	Emergency situations	64
5.6.1.	Trips	64
5.6.2.	Fire	64
5.6.3.	ESD commands.....	64
5.6.4.	Manual stops	65
5.6.4.1.	Normal stop.....	65
5.6.4.2.	Fast stop	66
5.6.4.3.	Emergency stop.....	67
5.7.	Resolving alarm conditions after disturbance of operation	68
5.7.1.	Manual emergency stop.....	68
5.7.2.	Automatic emergency stop	69

6. INSPECTION AND MAINTENANCE70

6.1.	Inspection and maintenance intervals	71
6.1.1.	Inspection intervals	71
6.1.2.	Maintenance intervals	72
6.2.	General instructions on inspection.....	73
6.2.1.	Leakages	73
6.2.2.	Security of attachment:	73
6.2.3.	Unobstructed flow.....	73
6.2.4.	Corrosion protection	73
6.2.5.	Cable checking.....	73

6.3.	Specific inspection procedures	74
6.3.1.	Oil cooler inspection	74
6.3.2.	Ventilation and engine air flow path inspection	74
6.3.3.	Batteries	75
6.3.4.	Battery charger.....	75
6.4.	Maintenance	76
6.4.1.	Oil demister filter change.....	76
6.4.2.	Liquid fuel filter change	76
6.4.3.	Suction filter change	77
6.4.4.	Duplex oil filter changeover	78
6.4.5.	Duplex oil filter replacement	79
6.4.6.	Oil replacement.....	79
6.4.7.	Generator greasing.....	80
6.4.8.	Running wash operation	81
6.4.9.	Fire fighting system	83
6.4.10.	Gas detection system	84
6.4.11.	Unit ventilation and engine air filters replacement.....	85
6.4.11.1.	Replacement of inlet air ventilation filters	85
6.4.11.2.	Changing pre-filters engine air intake.....	86
6.4.11.3.	Changing high efficiency filters engine air intake.....	86
6.4.12.	Air dryer filter change.....	87
6.4.13.	Draining air tank	87
6.4.14.	Disassembly and mounting of new gearbox driving pins.....	88
6.4.14.1.	Disassembly driving pins after breaking for overload.....	88
6.4.14.2.	Mounting of new driving pins	89

7. HANDLING & STORAGE.....91

7.1.	General handling requirements.....	91
7.2.	Lifting	91
7.3.	Short term storage.....	92
7.4.	Long term storage	93